 
 


Portable Weigh Pads

Quick Start Guide

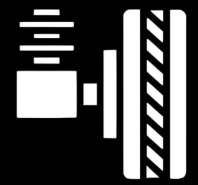

CONTACT US:  +44 (0) 1603 485 153

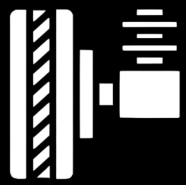

Contents

 
 
3.....What's Included

3.....Safety Precautions

3.....Charging the System

4.....Setup Instructions

5.....Display Unit Key Descriptions

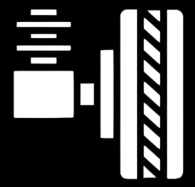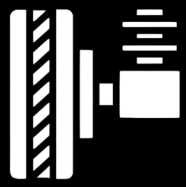

What's Included

- 4× Wireless Weigh Pads (this will vary on package purchased)
- 1× Wireless Monitor (Display Unit)
- Charging Cables (for pads and control box)
- Antennas (For Weigh Pads)
- User Manual (this document)



Weigh Pad



Antenna



Monitor



Charger


Safety Precautions

- Use on a flat, stable, and clean surface only.
- Ensure all equipment is fully charged before use. Never drive over the weigh pads at speed—slow roll only.
- Do not exceed the weight capacity per pad (this can be 2T or 10T).
- Avoid contact with water.

Charging the system

Before first use:

- **Charge Pads:** Connect each weigh pad to power using the provided charger. Charging could take 4-6 hours.
- **Charge Monitor:** Connect the display unit to power and charge fully.

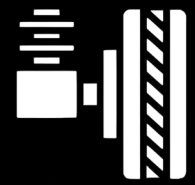

Setup Instructions

Step-by-Step Setup

1. Position the Pads

- Place each pad on a flat, level surface, spaced appropriately for the vehicle's wheelbase.
- Ensure the pads are aligned and not obstructed.

2. Power On

- Press the power button on each weigh pad until the LED lights turn on.
- Press the power button on the monitor/display unit.

3. Automatic Pairing

- The monitor will automatically detect and sync with the active pads.
- Wait for the pads to connect. (you will see a number 0 come up when successful)

4. Zero the Pads


- With no weight on the pads, press the ZERO or TARE button on the monitor/display unit to ensure accurate measurement.

5. Drive over pads

- Slowly drive or carefully place each wheel onto the centre of the pads.
- Wait for the display to stabilize and show the total and individual wheel weights.

6. Record or Export Data (if applicable)


- Use built-in memory or printer to save or transfer data.

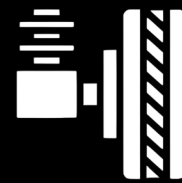


Display Unit Key Descriptions





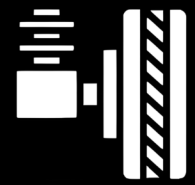

SN	CLEAR 1	TIME 2	DATE 3	SAVE PRINT
CN	PAPER 4	TARESAVE 5	TARESET 6	TARE
SEARCH	REPORT 7	GW/NW 8	REPRINT 9	ZERO
	SETUP	F1 0	INPUT SAVE	WEIGH EXIT

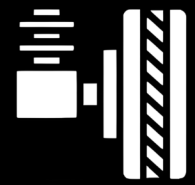Key Symbols	Function
CLEAR 1	Allows you to clear records
TIME 2	Can change the time for documentation
DATE 3	So you can change the date
PAPER 4	(not relevant)



Key Symbols	Function
TARESAVE 5	Allows you to save a weight for tare
TARESET 6	Have a set weight for you to tare
REPORT 7	Search a weigh you did
GW/NW 8	(Not Relevant)
REPRINT 9	Reprint your previous weights
F1 0	(Not Relevant)
SN	This button allows you to customise weighs for your records
CN	This button again allows you to customise your records
SEARCH	This allows you to search those old weighs you have done



Key Symbols	Function
	So you can light up the screen
	Save weights and print report
	Tare the weight that's on the pads
	Zero any ghost weight
	Menu
	Allows you to save a setting change
	Allows you to exit a mode or see each individual weight on pads