



SMARTWEIGH
INTELLIGENT VEHICLE WEIGHING

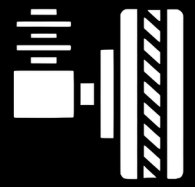

How To Calibrate Your Weighing System Using Our Onboard App



CONTACT US:  +44 (0) 1603 485 153

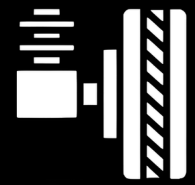

Contents

3.....What To Know Before You Start


4.....Obtaining Weights For Empty Calibration

5.....Obtaining Weights For Loaded Calibration

6.....Performing Empty Calibration In The Onboard App

8.....Performing Loaded Calibration In The Onboard App

10.....Calibration Complete

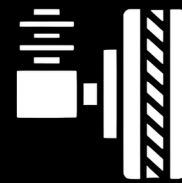

What to know before you start

Obtain the vehicle weights using a certified flat weighbridge for maximum results. If your weighbridge doesn't issue/print tickets, please ensure you note down all weighbridge weight figures as we will need these later to input into the Onboard App.



If you don't have the Onboard App installed on your Android phone/iPhone, please scan the QR code for your device below to download the app:



IMPORTANT

As soon as you have obtained all of your vehicle weights from the weighbridge, park the vehicle in a safe location and input them into the Onboard App.

It is essential that these are input into the Onboard App as soon as possible as failure to do so will affect your calibration readings!

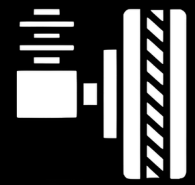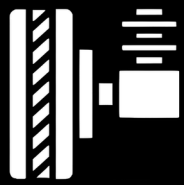

Obtaining Weights For Empty Calibration

1. Start by visiting a certified flat weighbridge for maximum results with your **empty** vehicle.

WEIGHBRIDGE

2. Ensure that the vehicle is **completely empty**, then drive onto the weighbridge so only the front (**steer axle**) is on and record this weight.





3. Now drive forward so only the rear (**drive axle**) is on the weighbridge and record this weight



4. While you are here, we recommend to weigh the full vehicle too to obtain the **Gross Vehicle Weight (GVW)** to check the axle totals are within range.



5. You should now have the vehicles **empty front (steer axle)** weight, **empty rear (drive axle)** weight and the **empty Gross Vehicle Weight (GVW)**.

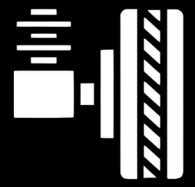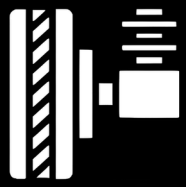


Obtaining Weights For Loaded Calibration

1. Start by visiting a certified flat weighbridge for maximum results with your **loaded** vehicle.


2. Ensure that the vehicle is **loaded with a suitable product**, then drive onto the weighbridge so only the front (**steer axle**) is on and record this weight.




3. Now drive forward so only the rear (**drive axle**) is on the weighbridge and record this weight

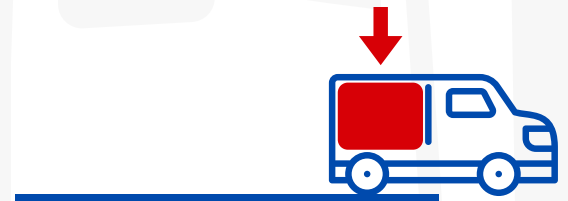

4. While you are here, we recommend to weigh the full vehicle too to obtain the **Gross Vehicle Weight (GVW)** to check the axle totals are within range.

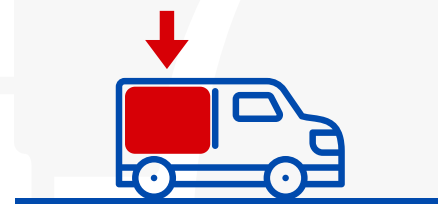


5. You should now have the vehicles **loaded front (steer axle)** weight, **loaded rear (drive axle)** weight and the **Loaded Gross Vehicle Weight (GVW)**.

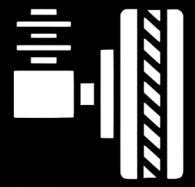



Performing Empty Calibration In The Onboard App

1. Open the Onboard App and go to the settings page by pressing the **'Settings'** button in the bottom right corner of the App.

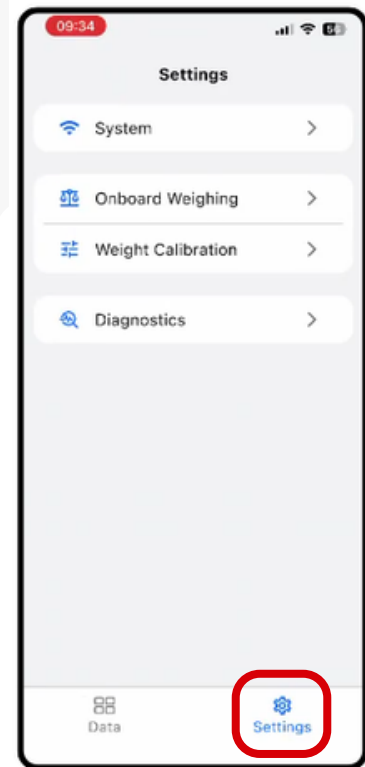


2. Now select **'Weight Calibration'**.

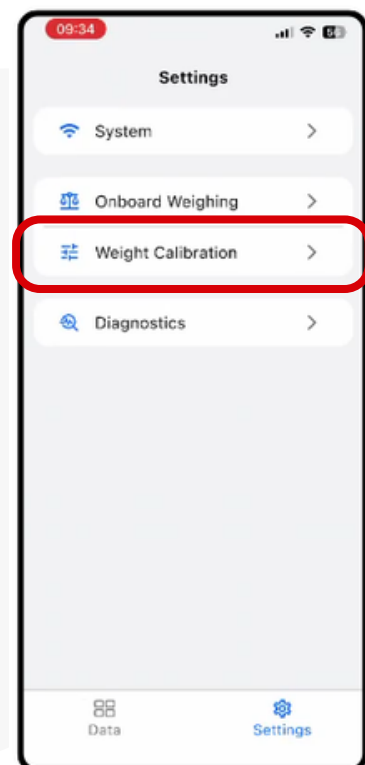


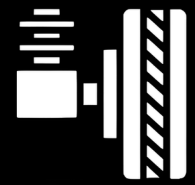


3. Ensure that the **'Unladen (Tare/Empty)'** option is selected.

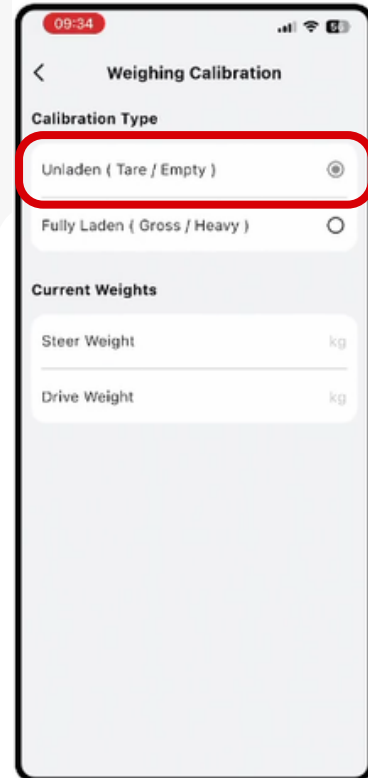


4. Enter the vehicles **empty front (steer axle) weight** into the **Steer Weight box** and the **empty rear (drive weight)** into the **Drive Weight box**.

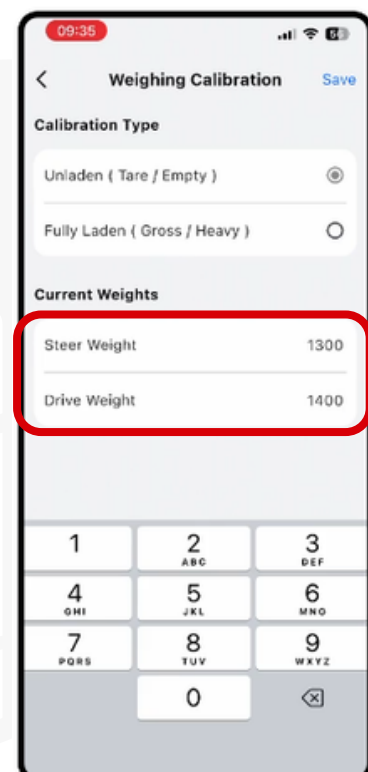

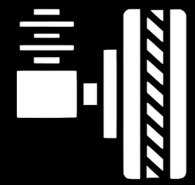



5. Press '**Save**' in the top right corner of the App to save these weights. Pressing the back arrow in the top left will **NOT** save these weights in the App.

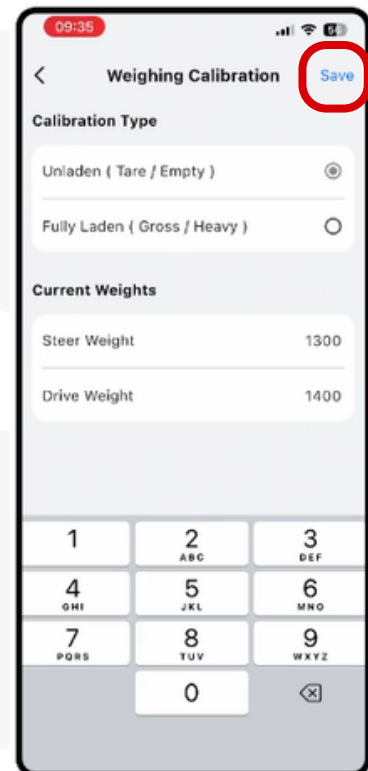


Performing Loaded Calibration In The Onboard App

1. Now for the loaded calibration, select '**Weight Calibration**' on the '**Settings**' page again.

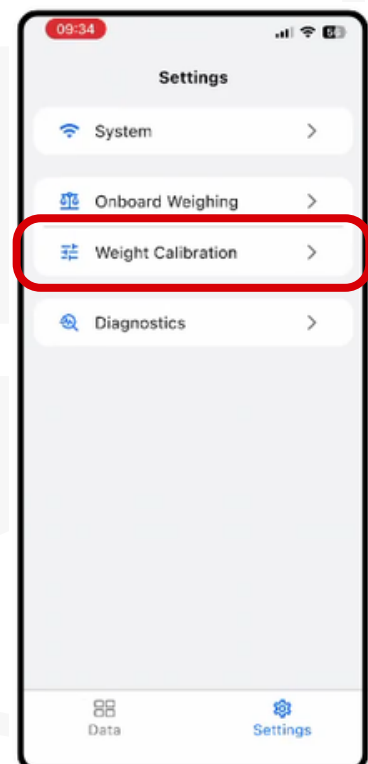


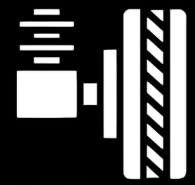

2. Select the '**Fully Laden (Gross/Heavy)**' option.

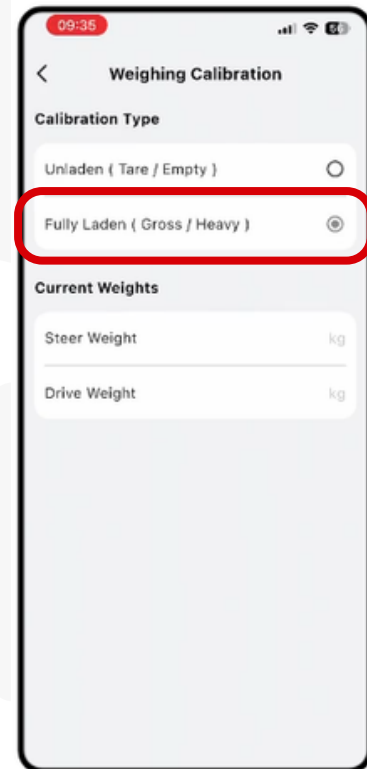


3. Enter the vehicles **loaded front (steer axle) weight** into the **Steer Weight box** and the **loaded rear (drive weight)** into the **Drive Weight box**.

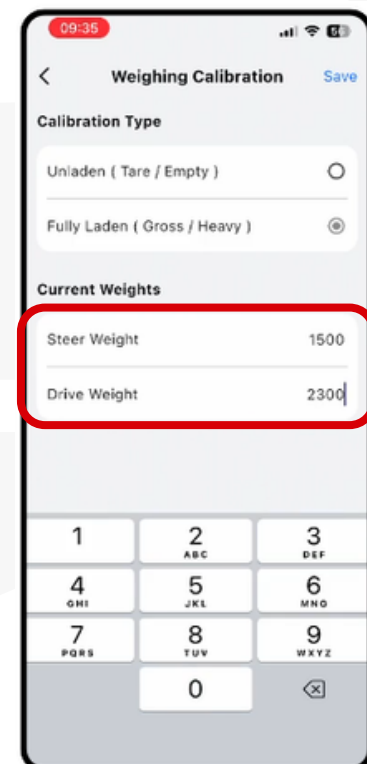



5. Press '**Save**' in the top right corner of the App to save these weights. Pressing the back arrow in the top left will **NOT** save these weights in the App.

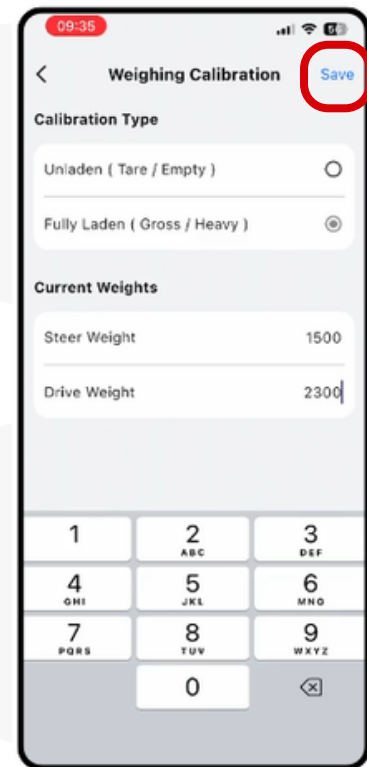

Calibration Complete

Once you have saved your vehicles empty weights and loaded weights into the Onboard App, your weighing system will be calibrated.

If you require more guidance, please contact our weighing system specialist.



+44 (0)1603 485 153



sales@smart-weigh.co.uk



www.smart-weigh.co.uk